

## 1


## 4G Stick Installation

## Step 1:

Rotate the lock, make sure the triangle logo is on the front and centered.

Plug the smart 4G device into the 4G port under the bottom (underside) of the inverter.

Tighten the nut clockwise as following.

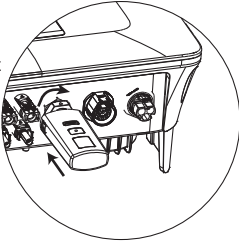

Note: If you already have an installer/agent account, please press 'Login' and enter with your installer/agent account directly.

## Step 2:

Select 'Installer' and enter Installer name, then click 'Register'. We suggest you complete all information to ensure after-sales service.

End user

Installer

Agent

Become an installer

Installer name

Agent code(optional)

Contact phone(optional)

Register

## 2

## APP Installation

Scan the QR Code below to download and install the FoxCloud APP on your smartphone.



HUAWEI AppGallery



Google Play



Apple App Store

## 3

## Register An Account



## For Installer

## Step 1:

Please click 'Register', enter installer's information and click 'Next' to complete the installer account registration.

Login

Register

Register

User name

Email(optional)

Password

Confirm password

Read and agree to the service agreement

Next

Note:

Installer: The installer.

Agent: The agent/distributor/installation company.



## For End User

## Step 1:

Please click 'Register', enter end user's information and click 'Next' to complete the end user's account registration.

Login

Register

Register

User name

Email(optional)

Password

Confirm password

Read and agree to the service agreement

Next

## Step 2:

Select 'End user' then scan the 4G bar code on the Smart 4G, and click 'Register'.

We suggest you complete all information to ensure after-sales service.

End user

Installer

 
Agent

Become an End user

Datalogger SN

Installer/agent code(optional)

Register



## Step 2:

Press the '+' icon on the homepage to add plant. Press the scan icon next to the 'Device list' to scan the QR code label on front side of the Smart 4G.



New power plant

Plant Name

Plant Type

Country/Region

City

Address

Price USD(\$)

Capacity kWp

System Capacity kWp

Post Code

Agent anonymous

Time Zone

Daylight Time

Device list



## 4

## Create A Plant



## For Installer

## Step 1:

Open the APP, login with your Installer/agent account.

Login

Register

Login

Register



## For End User

## Step 1:

Open the APP, login with your end user account.

Login

Register


Login

Register

Note: After starting the APP, it will pop-up a message 'Whether to allow positioning permissions', please select 'Allow'. For the Capacity, please fill in the actual capacity of the installed solar panels.


Step 2:

Press the '+' icon on the homepage to add plant. Press the scan icon next to the 'Device list' to scan the QR code label on front side of the Smart 4G.

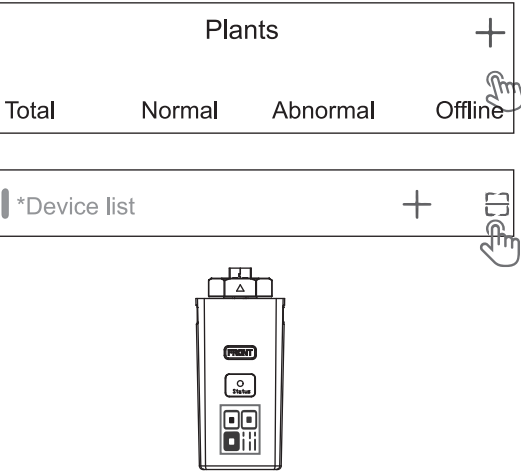



Note: After starting the APP, it will pop-up a message 'Whether to allow positioning permissions', please select 'Allow'. For the Capacity, please fill in the actual capacity of the installed solar panels.

Note: If SN has been bound to the plant already, APP will go to the following page. If SN has not been bound before, please refer to step 3.

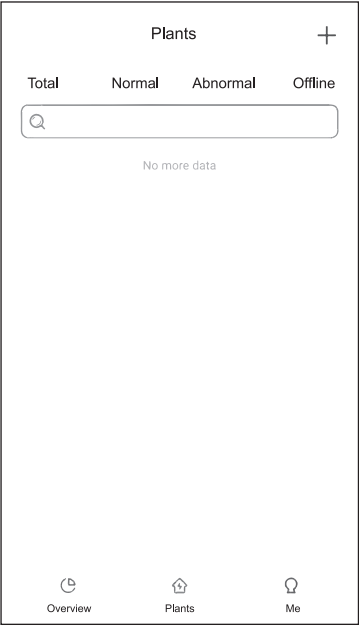

Step 3:


After scanning code successfully, click 'OK' on the top right corner of the page, APP will pop-up a message, please click 'OK'. Complete all required information and click 'OK' on the top right corner of the page.

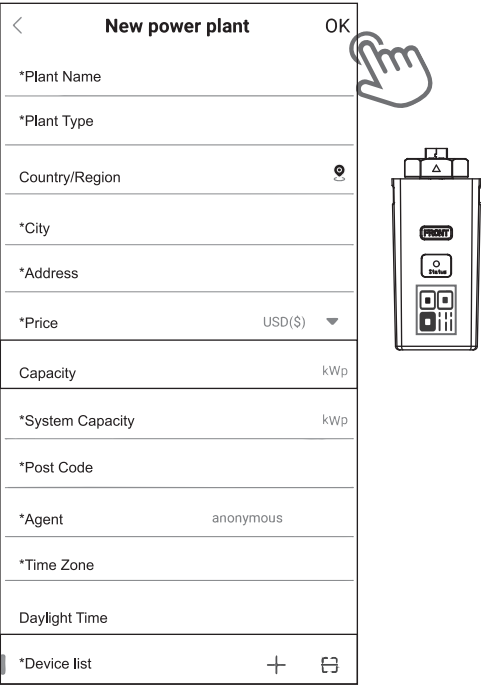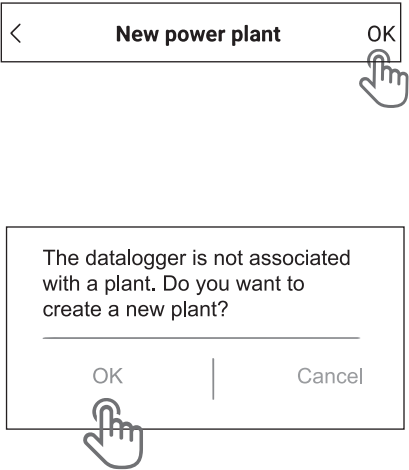

Note: This product has installed a SIM card, if you need to replace it, please refer to the following steps.


Step 1:

Hold down the buckles on both sides to open the smart 4G.

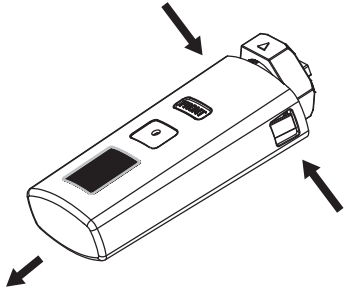

Step 2:

1. Remove the original card;
2. Insert the new card into the slot ( Make sure the core is facing down).

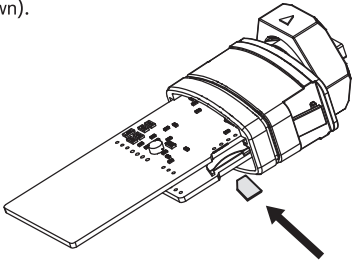


Note:

Please check from the side of the slot to make sure the SIM card core has sufficient contact with the card slot.

Step 3:

Insert the Smart 4G board.

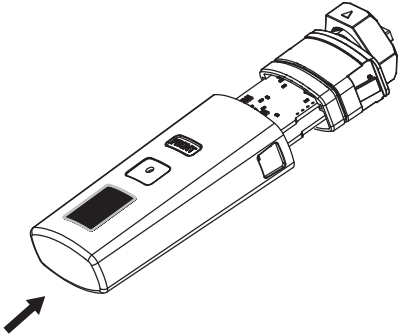

Step 4:

Rotate the lock, make sure the triangle logo is on the front and centered.

Plug the 4G device into the 4G port under the bottom (underside) of the inverter.

Tighten the nut clockwise as following.



The manual is updated frequently. Please scan the code to download the latest version.

